

DISPLAY REMOTE / QUICK GUIDE

See your settings. Set your mood.

Insert 2 AAA batteries (not included). Press any button to activate the display. Aim toward the light and operate within approximately 4 meters (13 feet). Angle, position, and surroundings can affect response. Multiple lights can be controlled together within range.

Control	Function
Power on/off	Manually switch the light on or off.
Constant on	Keep a steady light without automatic dusk/dawn switching.
Auto mode	Automatic daytime charging and nighttime lighting.
Flash / Breathing / Strobe	Choose periodic flashing, gradual brightness changes, or rapid flashing.
White / Neutral / Warm quick buttons	6500K cool white / 4600K neutral white / 2700K warm white.
K- / K+	Fine-tune 2700K to 6500K in 100K increments, for 39 settings.
Brightness controls	Adjust brightness in 1% increments. Quick buttons select 20%, 50%, or 100%.

Storage and care

The included remote holder offers convenient storage. Keep the remote away from rain and moisture. Remove the AAA batteries if it will not be used for a long time to reduce the risk of leakage.

If the remote or light does not respond

1. Replace the AAA batteries and check their orientation.
2. Press a button and confirm that the remote display turns on.
3. Aim at the light within approximately 4 meters (13 feet). Adjust your angle or position.
4. If the light remains off, allow a full day of suitable outdoor charging and test at night.
5. Contact support if the issue remains.

support@buinne.com

Replies within 48 hours on business days. Remote damage caused by battery leakage is excluded from warranty.